

# Guide



# Contents of the Guide

To get to know your Bang & Olufsen product, two guides are at your disposal.



The User's guide provides information on daily use. The Reference book gives a thorough overview of all aspects, installation and in-depth explanation.

To the right, you find the contents of this guide, the main chapters of the Reference book are listed below:

- Setting-up, 6
- Connecting, 7
- Assembly, 8
- Audio/video setup, 9
- Sound adjustment, 10
- Built-in clock, 11
- Tuning, 12
- Start and stop at a specific time, 14
- Daily use, 16
- Displays, 17
- Play CDs in different ways, 18
- Favourite CD tracks, 20
- Maintenance, 22
- Remote control, 23
- Use with a video system, 24
- Set and enter a PIN code, 26

## Your key to using BeoSound 3000

- 5 Buttons on the close-up operation panel
- 5 What you see in the displays

Note: For a key to identify what a button, source or status display looks like in an instruction sequence, please refer to page 5 in the Reference book.

## Using the CD Player

- 6 Play a CD
- 6 Different ways of playing a CD – random and repeat

## Play favourite CD tracks only

 
- 7 Make your own series of tracks
- 7 Delete your series of tracks

## Using the radio

- 8 Switch on the radio
- 8 Turn the volume up and down


## Your key to using BeoSound 3000

Reach out as if to touch the glass doors and the BeoSound 3000 opens automatically, revealing the music system concealed behind the doors.

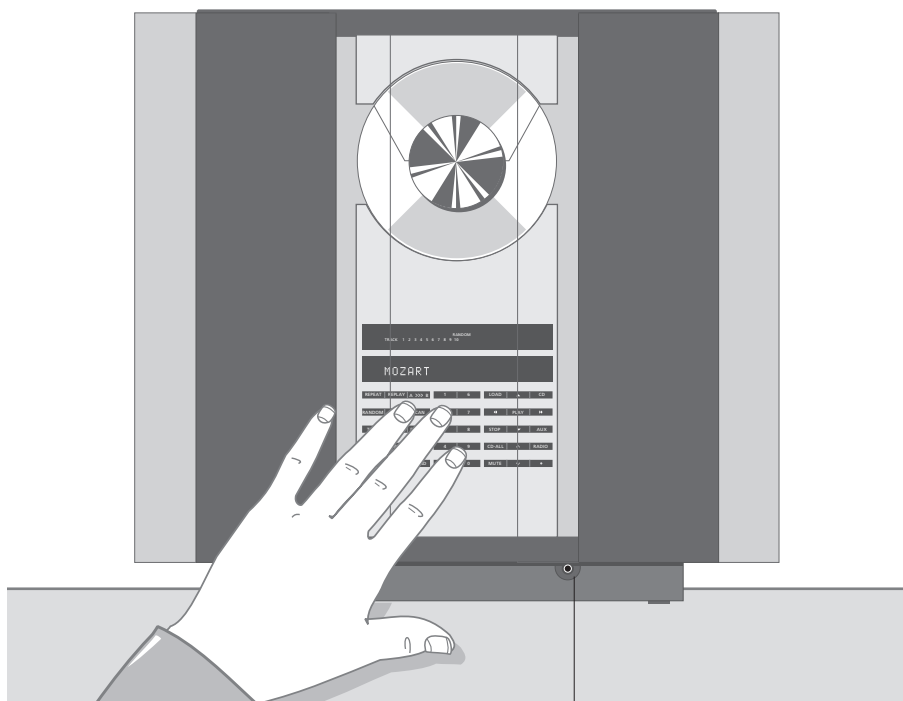

The open doors give you access to the close-up operation panel which gives you complete control of the CD player and the radio.

 Socket for headphones. When the headphones are plugged in, the speakers connected to BeoSound 3000 are muted.

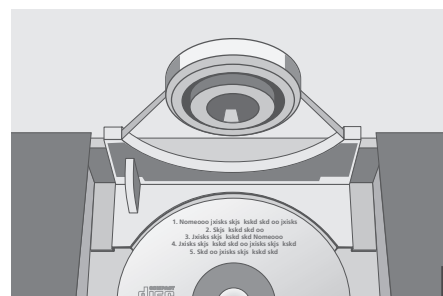

Press the LOAD button in the right-hand section of the operation panel to raise the clamp which holds the CD in place.

You can now remove the CD from the compartment and load the one you want to play. Always load the CD with the label facing you.

 
Press LOAD again to lower the clamp. If you press CD to start playing CD, the clamp lowers automatically.

Buttons on the operation panel

All the buttons are located in one place. They are conveniently grouped according to type of function, so you can easily find your way around the panel while operating the system.

**Displays**  
The displays tell you what the system is doing. The cues in the upper display relate to functions in the CD player, e.g. track number. The lower display shows the name of the current radio station, or it tells you which CD is playing, if you have named it.

**Secondary functions**  
This group of buttons gives access to all the secondary functions used e.g. for tuning in radio stations or programming, see page 12 in the Reference book for further instructions.

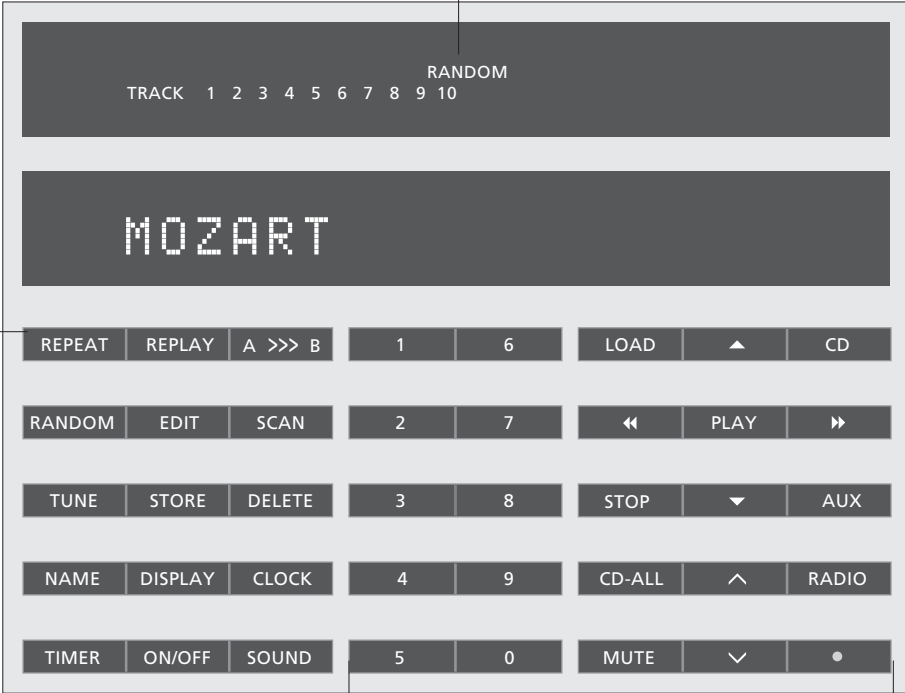

**Number buttons**  
The number buttons enable you to select other program numbers, or select tracks on a CD.

**Primary functions**  
The buttons on the right-hand side of the panel gives you access to all primary functions; switching the system on and off, adjusting volume and operating the radio and CD player.

NOTE! If PIN appears in the display the first time you activate a function, and you have not received a PIN code from your Bang & Olufsen retailer, contact your retailer to receive a PIN code. For further information about the PIN code function, refer to the chapter 'Set and enter a PIN code' on page 26 in the Reference book.

# Using the CD player

When you press the CD button to play the CD you have loaded, all information on the CD, for example the number of tracks will first be registered. Then the CD will start playing from the beginning. Playing will continue until the whole CD has been played, BeoSound 3000 then automatically switches to standby after 30 minutes, if you do not operate it.

You can step to other tracks or search through the CD – just as if you were fast forwarding or rewinding a tape.

It is also possible to play a CD in random order, and repeat a CD or just one track over and over – for up to 12 hours on end. These functions can be used in conjunction or separately.

You can always keep track of what the CD player is doing by watching the displays. The displays read out either track number or track time, depending on which display mode it has been set to. If you have named the CD, the name will also be shown in the display\*.

## Play a CD

When you play a CD, you can stop it at any time. If you select another source, the CD stops automatically. When you search through a CD, searching will continue for as long as you keep your finger on the button. When you lift your finger off the button, the CD resumes playing.

|              |                                                                                                                             |
|--------------|-----------------------------------------------------------------------------------------------------------------------------|
| <b>CD</b>    | Plays the CD you have loaded                                                                                                |
| <b>0 – 9</b> | Plays specific track numbers                                                                                                |
| <b>▲</b>     | Plays the next track                                                                                                        |
| <b>▼</b>     | Plays the previous track                                                                                                    |
| <b>STOP</b>  | Pauses playing                                                                                                              |
| <b>PLAY</b>  | Resumes playing                                                                                                             |
| <b>▶▶</b>    | Searches forward toward the end of the CD                                                                                   |
| <b>◀◀</b>    | Searches backward toward the beginning of the CD.<br>Keep the button pressed down until you have reached the point you want |

## Different ways of playing a CD

The random play function plays all the tracks on the CD in random order. The repeat function, repeats the CD for up to 12 hours, and the replay function plays the specific track over and over. The functions are cancelled by pressing the RANDOM, REPEAT or REPLAY button again.

|                     |                                                                                                                |
|---------------------|----------------------------------------------------------------------------------------------------------------|
| <b>RANDOM</b><br>ON | While the CD is playing, press RANDOM. ON appears – and RANDOM is shown in the upper display                   |
| <b>REPEAT</b><br>ON | While the CD is playing, press REPEAT. ON appears – and REPEAT is shown in the upper display                   |
| <b>REPLAY</b><br>ON | When you hear the track you want repeated, press REPLAY. ON appears – and REPEAT is shown in the upper display |

Note: If you cancel the random play function while the CD is playing, all tracks beyond the current track number will be played in chronological order, even if they have already been played while the random play function was activated.

\*NOTE! If the display has been set to show the name of the CD, only the name will appear in the display and you cannot follow the elapsed time process. See page 17 in the Reference book for details of the various display modes.

Sometimes not the entire selection of tracks on a CD is to your liking, it is therefore possible to edit the CD, so that only the tracks you like and select are played. The selected tracks are played in numerical order.

Load the CD you want to edit, the CD is then scanned. Scanning means that the first 15 seconds of each track on this CD will be played. On the display, the track number you are currently playing will appear. While listening to the track, you choose whether to include or exclude the track.

## Play or delete a series of tracks

Once you have edited a CD and selected your own series of tracks, then, every time you play the CD it starts playing the series of tracks you have chosen. But you can choose to listen to the entire CD. You can also delete the series of tracks you have made, to always play the CD in full.

|                          |                                                                                                                 |
|--------------------------|-----------------------------------------------------------------------------------------------------------------|
| <b>CD</b><br>CD ED       | Press CD to play your edited series of tracks. CD ED appears                                                    |
| <b>CD-ALL</b>            | <b>To play the entire CD...</b><br>Press CD-ALL                                                                 |
| <b>EDIT</b><br>EDIT ?    | <b>To delete a series...</b><br>While the edited CD is playing, press EDIT to delete the series. EDIT ? appears |
| <b>DELETE</b><br>DELETED | Press DELETE to delete the series altogether. DELETED appears                                                   |

## Select and store a series of tracks

Before editing, you must start playing the CD. If you do not make a selection of whether to include or exclude the track being played, it is automatically included. If you choose to leave the function before you have included or excluded all the tracks on the CD, the remaining tracks will be regarded as excluded.

|                        |                                                                                                                            |
|------------------------|----------------------------------------------------------------------------------------------------------------------------|
| <b>EDIT</b><br>EDIT ?  | While the CD is playing, press EDIT to edit the CD. EDIT ? appears                                                         |
| <b>PLAY</b><br>EDITING | Press PLAY to start scanning the CD. EDITING appears – and SCAN is shown in the upper display                              |
| ▲                      | Press ▲ to include a track number in the series                                                                            |
| ▼                      | or, press ▼ to exclude a track number from the series                                                                      |
| <b>EDIT OK ?</b>       | EDIT OK ? appears in the display when the last track has been included or excluded                                         |
| <b>STORE</b><br>STORED | Press STORE to store the sequence. STORED appears                                                                          |
| <b>STORE</b>           | Press STORE at any time if you wish to terminate the editing procedure before the last track has been included or excluded |

Note: If you happen to make a mistake or change your mind while you are choosing your tracks, just press the CD button and the EDIT button again – and start over.

NOTE! Track selection can also be used in conjunction with the functions of playing tracks in random order and repeating a CD, see the previous page.

# Using the radio

To listen to the radio, you must first find and store the frequencies of the radio stations.

You can store up to 60 different radio stations in your BeoSound 3000 (see page 12 in the Reference book).

## Switch on the radio

When you switch on the radio, it automatically selects the station which you last listened to.

## Adjust the sound

While you are listening to the radio or CD player, you can of course adjust the sound volume, at any time.

|                                                                                   |                                                |                                                                                     |                                                                         |
|-----------------------------------------------------------------------------------|------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------|
| <b>RADIO</b>                                                                      | Press RADIO to switch on the radio             |  | Adjust the volume up                                                    |
|                                                                                   |                                                |  | or down                                                                 |
| <b>0 – 9</b>                                                                      | Use the number keys to select a stored station | <b>MUTE</b>                                                                         | Silences the speakers immediately. Press MUTE again to recall the sound |
|  | Step through all stored stations               |                                                                                     |                                                                         |
|  |                                                |                                                                                     |                                                                         |
|  | Switch to standby                              |                                                                                     |                                                                         |

Note: Pressing 0 will swap between present and previous radio station.







